

## Airlinq<sup>®</sup> Axio panel



For more information, please scan the QR code:




More Info

Included in box:


- 1 pcs. panel
- 1 pcs. installation cable

Panel dimensions in mm:

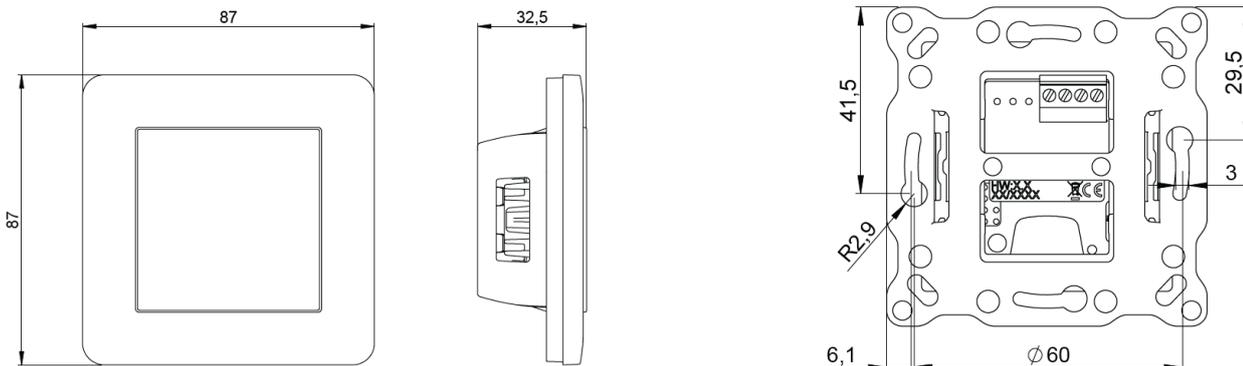

You can mount the panel in an Airmaster back box, in a surface mounted back box, or in a flush-mounted back box. Either option is possible; ensure there is sufficient space for the installation cable at the rear. The box must be Euro 1-Gang size.

You need to disassemble the Airlinq<sup>®</sup> Axio panel before you can mount it. Use your fingers to pop out the display from the back to avoid damaging it.


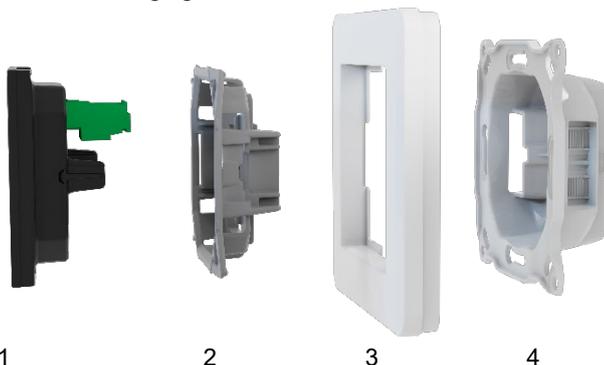


**1** Pull the cable through parts 2, 3, and 4.

Connect the installation cable to the display.  
You can remove the screw terminal on the back of the display to simplify installation.


Strip the outer sheath of the installation cable just inside the box, and secure it with a strip for strain relief.

Take care not to bend the cable too much within the back box.

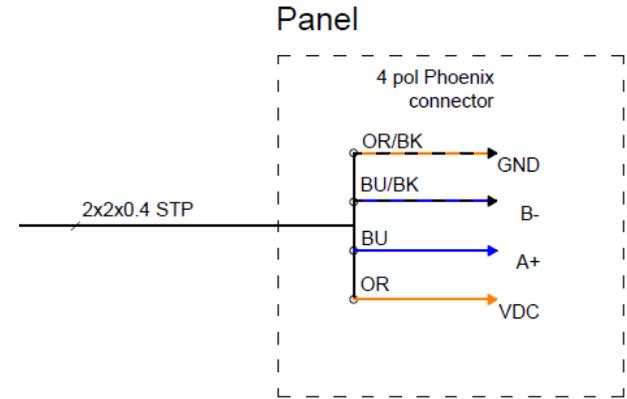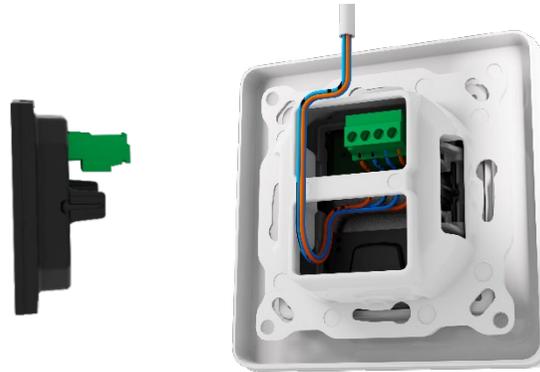


**2** Mount the back frame into a back box using 2 screws. Twist the frame and tighten the screws to keep the frame locked in place.

(shown here mounted in an Airmaster surface mounted back box).

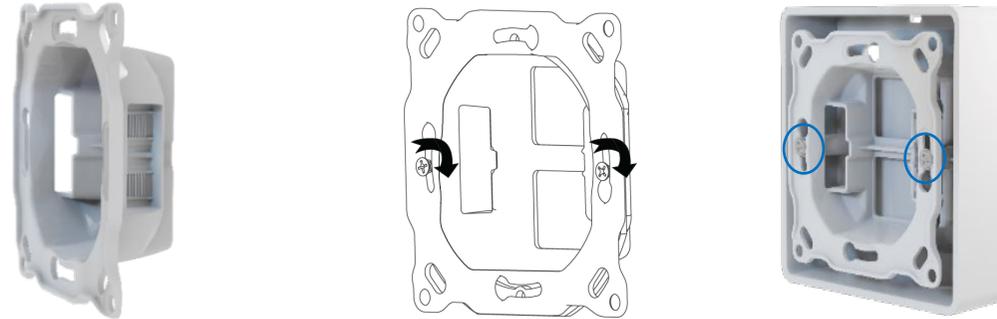

**3** Assemble the panel.

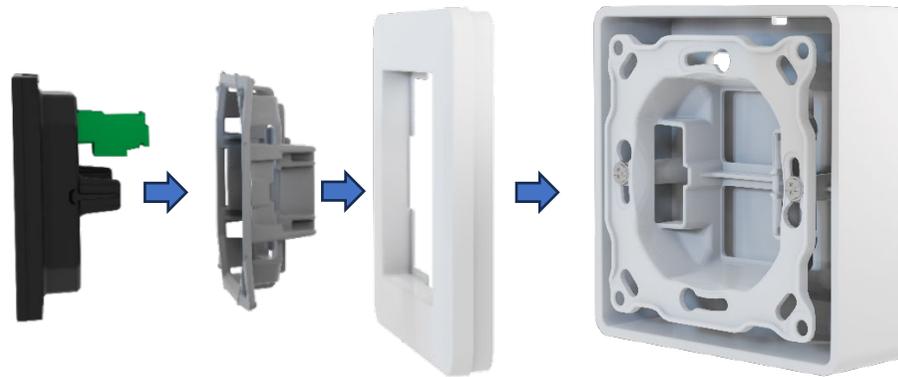

**4** Please refer to the AMX 4 installation manual for instructions on connecting the installation cable to the External Connection Module on the AMX 4 unit.